



# DIVIDER TROUBLESHOOTING GUIDE

A list of possible symptoms and problems that could arise during the operation of the system is provided below. You should find the symptom most associated with the conditions you meet. In the following table, the symptoms are in the left column, their descriptions as well as their likely causes are in the central column and the possible solutions are in the right column.

| SYMPTOM                             | PROBABLE CAUSE  | SOLUTIONS   |
|-------------------------------------|---|---|
| The dividing chute does not switch. | <ul style="list-style-type: none"> <li>✓ Pneumatic network.</li> <li>✓ The solenoid valves do not activate.</li> <li>✓ The feeders' level detectors (paddle switches) are defective.</li> </ul> | <ul style="list-style-type: none"> <li>✓ Verify the air supply of the network.</li> <li>✓ Clean and reinstall valves.</li> <li>✓ Verify the Electric supply.</li> <li>✓ Verify the connection.</li> </ul> |